


CB Radio (SE only)

LEFT SIDE

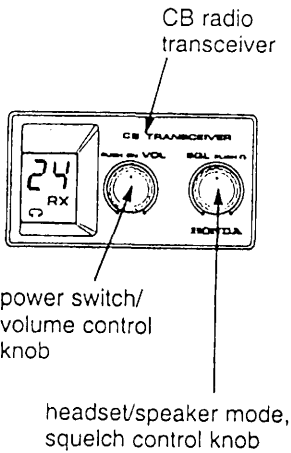

FREQUENCY CORRESPONDING TO EACH CHANNEL

Ch.	MHz	Ch.	MHz
1	26.965	21	27.215
2	26.975	22	27.225
3	26.985	23	27.255
4	27.005	24	27.235
5	27.015	25	27.245
6	27.025	26	27.265
7	27.035	27	27.275
8	27.055	28	27.285
9	27.065	29	27.295
10	27.075	30	27.305
11	27.085	31	27.315
12	27.105	32	27.325
13	27.115	33	27.335
14	27.125	34	27.345
15	27.135	35	27.355
16	27.155	36	27.365
17	27.165	37	27.375
18	27.175	38	27.385
19	27.185	39	27.395
20	27.205	40	27.405

Some local governments prohibit the use of CB radios. Always obey applicable laws and regulations.

The CB radio transceiver is located below the left fairing pocket. Additional switches are integrated in the left handlebar controls.

There are 40 channels. Each channel corresponds to a specific frequency. Use the table to determine the desired channel.

Power Switch/Volume Control Knob

- To turn the CB radio on — push this knob in.
- To increase volume — turn the knob clockwise.