

---

The air suspension system adjusts the rear suspension's air pressure by means of the air pressure control.

Preparation:

Place the motorcycle on its center stand on firm level ground.

NOTE:

- We recommend that you do not use the audio system and other electrical accessories when the INCREASE button is being operated to prevent over discharging of the battery.

To check and adjust the rear suspension air pressure:

1. Turn the ignition switch to ON, P or ACC.
2. The air pressure will appear in the display whenever the P. CHECK button is pushed.

NOTE:

- "E Type" reads in psi. "F, ED, U, SW, SD, FI, AR, SP, SI Type" reads in kPa.
3. Push the INCREASE or DECREASE button to adjust the air pressure while pushing the P CHECK button.

