

FEATURES (Not required for operation)

SEAT COVER (*SE only*)

A seat cover, for use when the motorcycle is parked, is stored in the pouch located beneath the passenger backrest. Pull the pouch forward unzip it, remove the seat cover, and slip it over the seat. Hook the seat cover's security cord inside the travel trunk.

NOTE:

- Riding with seat cover installed can damage it.
- The seat cover is water-repellant, but not water-proof.
- The seat cover may be washed after unzipping it from the pouch and unhooking its security cord from the travel trunk.

Seat Cover Pouch

