


# FEATURES (Not required for operation)

---

## Intercom Mute Knob:

The intercom mute system automatically lowers the music/program volume when you speak through the intercom. With the knob turned counterclockwise, you must speak more loudly to activate the mute circuit. With the knob turned clockwise, the mute will activate even at low speaking levels.

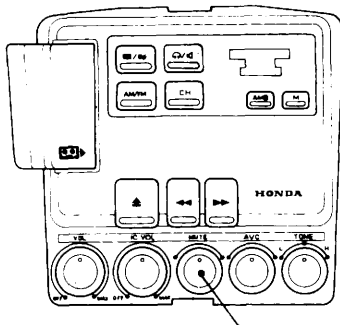

Intercom Mute Knob