

MAINTENANCE

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.

CAUTION:

- **Turn the ignition switch OFF before checking or replacing fuses to prevent accidental short-circuiting.**

To replace the main fuse (A), disconnect the lead connector of the starter magnetic switch.

To replace the main fuse (B), loosen the screws. Tighten the screws securely after replacing the fuse.

To replace reverse fuses, open the cap and pull out the fuses.

To replace any fuses in the fuse box, pull the old fuse out of the clips with the fuse remover. Push a new fuse into the clips.

LEFT SIDE

