


---

The opening/ending ceremony can be turned off.

1. Push the MODE button three times to display “OPENING/ENDING CEREMONY”.
2. Push the DISP button once to turn the display OFF.
3. Push the MODE button to set and the ceremony display will disappear.

To restore the ceremony display — change “OPENING/ENDING CEREMONY” from OFF to ON.

ceremony display ON

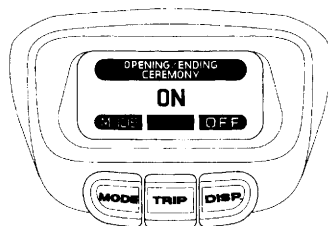

ceremony display OFF

