

---

### *Storing Pre-load Into the Memory*

You may store two selected adjustments in “MEMO 1” or “MEMO 2”.

1. Adjust the pre-load to the desired position.
2. Push and hold the MEMO 1 or MEMO 2 button until “STORE MEMO 1” or “STORE MEMO 2” blinks in the multi-display. When the blinking stops, the current position is stored in memory.

Storing




Stored

**MEMO 1**

### *Selecting the Memorized Position*

- Push the MEMO (1 or 2) button to select the memorized position. “CALL MEMO 1” or “CALL MEMO 2” will blink. When the position is selected, “MEMO 1” or “MEMO 2” will turn on.

Calling

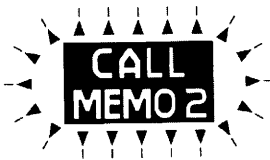

Called

**MEMO 2**

Pushing the rear spring pre-load switch or the MEMO (1 or 2) button while selecting a memorized position will cancel the calling procedure.