


FEATURES (Not required for operation)

STEERING LOCK

To lock the steering, turn the handlebars all the way to the left or right, turn the key to LOCK while pushing in. Remove the key.

Do not turn the key to LOCK while riding the motorcycle; loss of vehicle control will result.

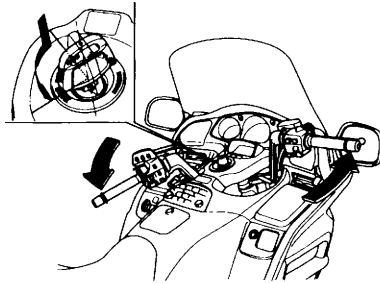

HELMET HOLDERS


Helmet holders are located below the travel trunk. Open the travel trunk (page 62) and turn the knob in the trunk, the helmet holders will be unlocked.

Hang your helmet on the holder pin and push the pin in to lock it.

The helmet holder is designed for helmet security while parked. Do not ride with a helmet attached to the holder.

NOTICE

Riding with a helmet attached to the helmet holder can cause damage to the helmet, or damage to the paint or finish of your motorcycle.

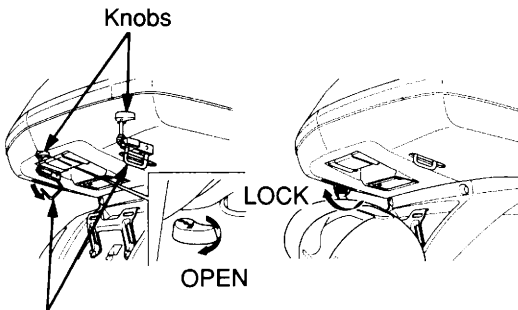

Helmet holders