

FEATURES (Not required for operation)

PTY Genre Preset:

1. Check that A. SEL is not turned on. If it is on, push the A.SEL button to turn it off.
2. Select the UKW band and push the PTY button.
3. Push the select button and select the PTY group.

CH1	CH2	CH3	CH4	CH5	CH6
INFO	POP	CLASSIC	OTHER M	CULTURE	VARIED

4. When the select button which is the same as the chosen PTY group is pushed for two seconds, it becomes the establishment mode of the following PTY genre.

CH1	CH2	CH3	CH4	CH5	CH6
FINANCE INFO NEWS TRAVEL WEATHER	EASY MUS POP MUS ROCK MUS	CLASSICS L. CLASS	COUNTRY FOLK MUS JAZZ NATION M OLDIES OTH M	AFFAIRS CULTURE DOCUMENT EDUCATE RELIGION SCIENCE SOCIAL A	CHILDREN DRAMA LEISURE PHONE IN SPORT VARIED

5. Push the select button and select the PTY genre.
6. Push the select button for two seconds, the PTY genre is set.
7. Repeat steps 3 to 6 to set the other PTY genres.