

# **FEATURES (Not required for operation)**

## VOLUME Control:

Refer to Radio VOLUME Control on page 100.

## Intercom Muting:


The intercom mute system automatically lowers (does not silence) the music/program volume when you speak through the intercom.

To adjust this circuit — push the VOLUME knob two times. “INTERCOM MUTE” will display.

- To increase the background music/program volume — turn the VOLUME knob counterclockwise.
- To decrease the background music/program volume — turn the VOLUME knob clockwise.  
(control range: 0 from 20.)

**INTERCOM MUTE**

**VOL 8**

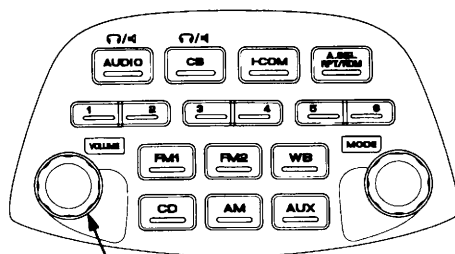

VOLUME knob