

MAINTENANCE

Front Lower Cover

Removal

1. Remove the clips.
2. Remove the bolts.

Installation

- Installation can be done in the reverse order of removal.

