


MAINTENANCE

1. Park your motorcycle on its center stand on a firm, level surface.
2. Remove the right engine side cover (page 138).
3. Remove the front lower cover (page 140).
4. To drain the oil, remove the oil filler cap/dipstick, crankcase drain bolt, and sealing washer.
5. Remove the oil filter with a filter wrench and let the remaining oil drain out.
Discard the oil filter.

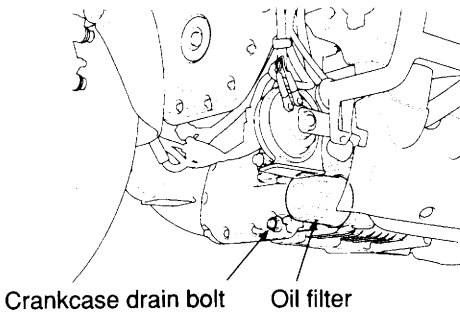

6. Apply a thin coat of engine oil to the new oil filter rubber seal.

