


# MAINTENANCE

---

## Stop/Taillight Bulb

1. Open the travel trunk.
2. Remove the nuts and remove the stop/taillight assembly.

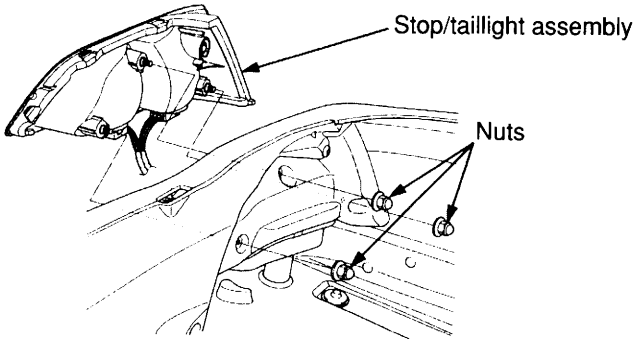

3. Turn the socket approximately 45° counterclockwise, then pull it out toward you.
4. Pull out the bulb without turning.
5. Install a new bulb in the reverse order of removal.

