


# MAJOR COMPONENTS

## (Information you need to operate this motorcycle)

---

The distance between the tip of the brake lever and the grip may be adjusted.

1. Turn the adjuster dial while pushing the brake lever forward.
2. Align the index mark on the brake lever with the numbers on the adjuster dial.
3. Apply the brake, release it, then spin the wheel and check that it rotates freely. Repeat this procedure several times.

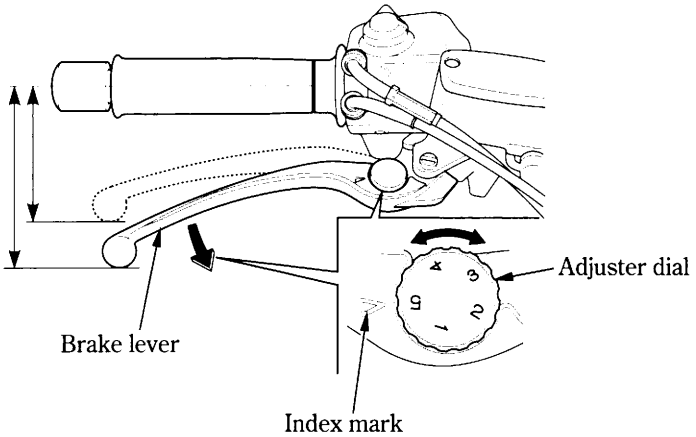

### Other Checks:

Make sure there are no fluid leaks. Check for deterioration or cracks in the hoses and fittings.