

FEATURES

(Not required for operation)

WINDSHIELD HEIGHT ADJUSTMENT

The windshield height can be adjusted slightly to suit your riding preference.

To adjust:

1. Pull both levers up to release the windshield.
2. To raise:
Move the windshield up to the desired position.
3. To lower:
Move the windshield up to the upper mark (○), lower it all the way (to reset the ratchet mechanism), then raise it to the desired position.
4. On both sides, align the mark on the windshield with the upper edge of the instrument panel.
5. Push the levers down to secure the windshield.

