

# FEATURES


## (Not required for operation)

---

### Input Jack Setup:

The auxiliary input jack is located under the left fairing pocket. To use it:

1. Open the left fairing pocket cover and remove the clips (page 173) and grommet A.
2. Lift out the fairing pocket.

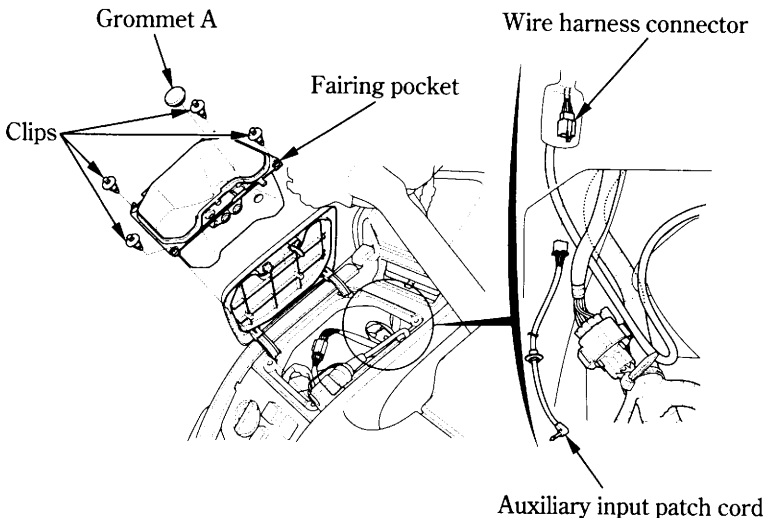

3. Remove the auxiliary input patch cord from the owner's manual pouch.
4. Plug the auxiliary input patch cord into the wire harness connector.