

FEATURES

(Not required for operation)

Auxiliary (AUX) Input:


Use this function to listen to other audio such as a portable CD player:

- To turn the function on — push the AUX button. (AUX appears on the display.)
- To turn the function off — push the AM, FM 1, or FM 2 button.

The following functions operate the same as they do with the AM/FM radio: Switch output, Tone control, Fader control, Muting, AMB, AVC.

AUX

AUX indicator

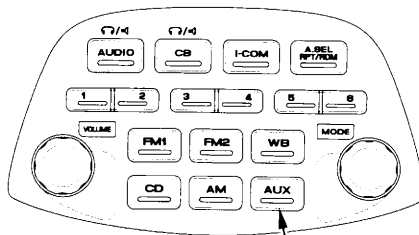

AUX button