

# MAINTENANCE

---

For related torque specifications, see page 156. Cover both sides of the front wheel with protective tape or an equivalent. The numbers indicate the disassembly sequence.

