




The battery is located in the battery box behind the left side cover.  
After turning the ignition switch OFF, wait more than 10 seconds and then remove the negative cable of the battery.

Removal:

1. Make sure the ignition switch is OFF.
2. Remove the left side cover (page 138).
3. Pull the clip and remove battery plate.
4. Disconnect the negative (−) terminal lead from the battery first.
5. Remove the bolt and open the battery holder.
6. Disconnect the positive (+) terminal lead.
7. Pull the battery out of the battery box.

Be careful to avoid damaging the cover under the battery box when you remove the battery.

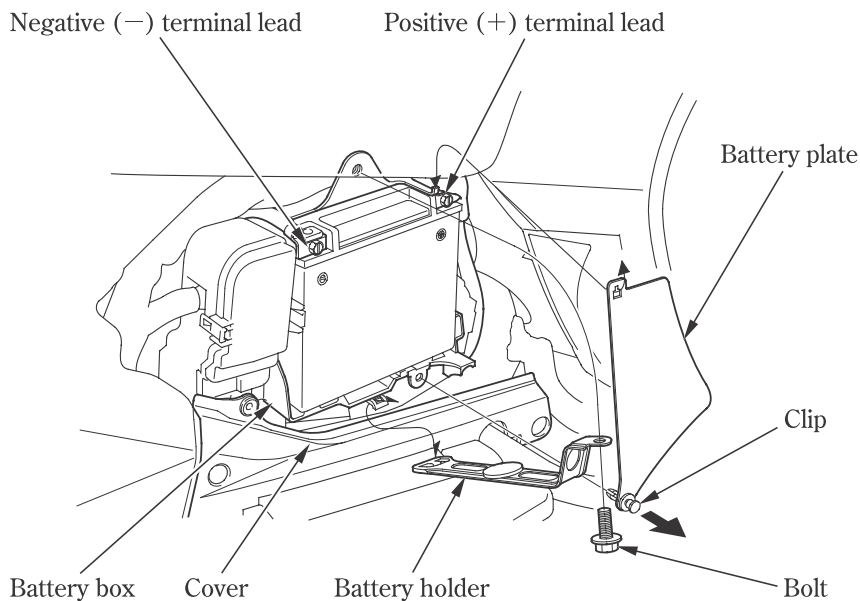

Installation:

1. Reinstall in the reverse order of removal. Be sure to connect the positive (+) terminal first, then the negative (−) terminal.
2. Check all bolts and other fasteners are secure.

