

## ////////////////////// MAINTENANCE SCHEDULE ////////////////////////

The maintenance intervals shown in the following schedule are based upon average riding conditions. Machines subjected to severe use, or ridden in unusually dusty areas, require more frequent servicing. Items marked\* should be serviced by an

authorized HONDA dealer, unless the owner has proper tools and is mechanically proficient.

Other maintenance items are simple to perform and may be serviced by the owner.

|   | INITIAL SERVICE PERIOD | REGULAR SERVICE PERIOD |           |
|---|------------------------|------------------------|-----------|
|   | 1 month                | 6 months               | 12 months |
| SPARK PLUG—<br>Clean and adjust gap or replace if necessary.                              |                        | ○                      |           |
| *CONTACT POINTS AND IGNITION TIMING—<br>Clean, check, and adjust or replace if necessary. | ●                      | ○                      |           |
| *CARBURETOR—Check, and adjust if necessary.   |                        | ○                      |           |
| THROTTLE OPERATION—<br>Inspect cable. Check, and adjust free play.                        | ●                      | ○                      |           |
| *CLUTCH—Check operation, and adjust if necessary.   | ●                      | ○                      |           |