


3. If the drive chain is found to require adjustment, the procedure is as follows:
 - a. Remove the rear axle nut cotter pin ② and loosen the rear axle nut ③.
 - b. Turn the adjusting nut ④ to increase or decrease chain tension. Align the chain adjuster index marks ⑤ with the reference marks ⑥ on both sides of the rear fork.

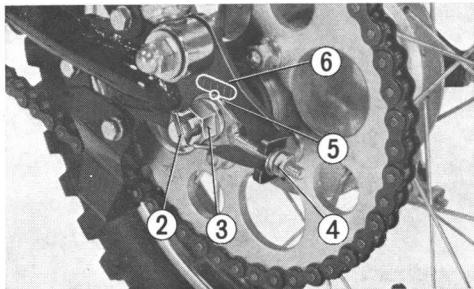


- | | |
|-----------------|-------------------|
| ② Cotter pin | ⑤ Index mark |
| ③ Rear axle nut | ⑥ Reference marks |
| ④ Adjusting nut | |

- c. Tighten the rear axle nut and secure the nut with a new cotter pin.
- d. Check rear brake adjustment.

CAUTION:

Check alignment of the chain protector ⑦. If the chain protector should become bent, it may rub against the drive chain and cause rapid wear.

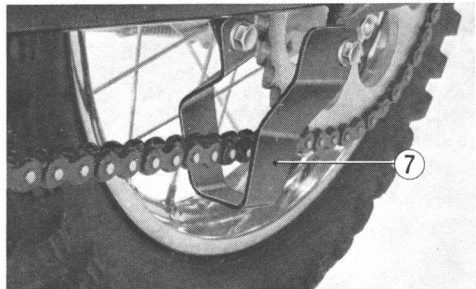

- ⑦ Chain protector