

## Drive Chain ► Adjusting the Drive Chain Slack

5. Inspect the sprockets. ➤ P. 42
6. Clean and lubricate the drive chain.  
➤ P. 43

### Adjusting the Drive Chain Slack

Adjusting the chain requires special tools. Have the drive chain slack adjusted by your dealer.

1. Place your motorcycle on the side stand on a level surface.
2. Stop the engine. Place the gear in Neutral.
3. Loosen the rear axle nut.
4. Loosen the lock nuts on both sides of the swingarm.

