

Filling the oil tank

The oil tank is located at the left center of an motorcycle. Place the motorcycle in the upright position, and check oil level at the inspection window ①.




① Inspection window

If it is below the top of the inspection window, remove the oil tank cap ② and fill the tank with oil.

When the oil level is at the top of the inspection window, there is approximately 0.25 U.S. qt. (0.24 ℓ) of oil in the tank.

NOTE :

When filling, take care not to allow foreign materials to enter the tank.

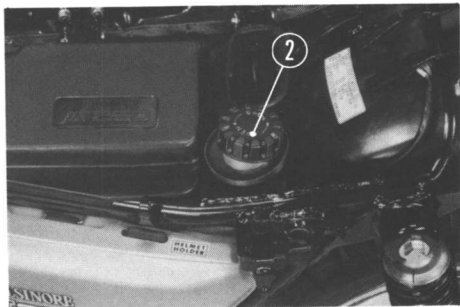

② Oil tank cap