

Ignition Switch

The ignition switch ① is located on the brake lever mount, next to the headlight switch.

With the main switch in the “ON” position and the ignition switch in the center “RUN” position, the ignition circuit is complete, and the engine will operate. The ignition switch may be turned in either direction to “OFF” position which opens the ignition circuit and stops the engine.

This switch is provided as an emergency safety device, and as a convenience, to stop the engine before reaching for the main switch key.


The ignition switch is normally left in the “RUN” position and should be reset to the “RUN” position after use. When the motorcycle is parked, turn the main switch to the “OFF” position.

Headlight Switch

The headlight switch ② is located at the right handlebar grip.

Move the switch up to turn the headlight and taillight on, and down to turn lights off.

The headlight switch will close the light circuit only when the main switch is in the “ON” position, and the headlight will be lit only when the engine is running.

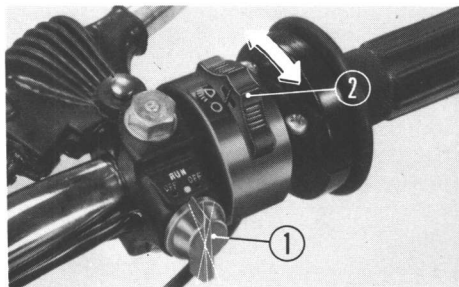

- ① Ignition switch
- ② Headlight switch