

PRECAUTIONS BEFORE RIDING

- Do not wear loose clothing which can catch in the drive chain or in the wheels and tires.
- During on-the-road operation ensure that all required equipment specified by the local laws and regulations is installed on the motorcycle.

STARTING THE ENGINE

Starting a Cold Engine

1. Place the fuel valve lever in "ON" position.
2. Shift the transmission into neutral (the engine can be started in gear with the clutch disengaged, but it is recommended that starting be performed in neutral).
3. Insert the key into the main switch and turn it to the "ON" position.
4. Make sure the ignition switch is in "RUN" position.
5. Lower the fuel mixture enrichment lever ① (see page 25).
6. With throttle closed, operate the kick starter pedal with rapid, full strokes until the engine starts. Open the throttle when the engine fires.