



4. Remove the air cleaner element ④.
5. Wash the element in clean stoddard solvent and dry it thoroughly.
6. Soak the element in clean gear oil (SAE 80~SAE 90) until it is saturated. Then squeeze it to remove excess oil.
7. Install the element.
8. Install the cleaner case cover and tighten the wing nut. Install the tool kit case and lower the seat.

**WARNING :**

**Gasoline or low flash point solvents are highly flammable and must not be used to clean the air cleaner elements.**

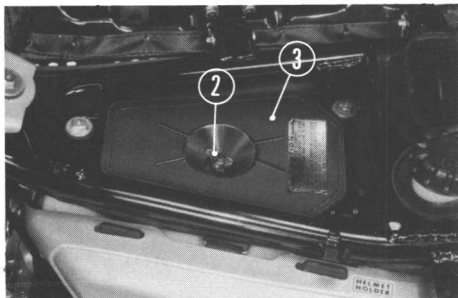

② Wing nut      ③ Air cleaner case cover

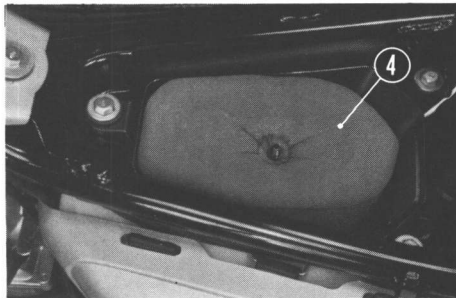

④ Air cleaner element