


NOTE:

The oil pump control cable must be adjusted whenever throttle grip adjustment is made by the throttle cable upper adjuster. (see page 42).


Oil Pump Cable Adjustment

Adjust the throttle grip free play before adjusting the oil pump cable.

1. Remove the oil pump cover ②.
2. Close the throttle fully.

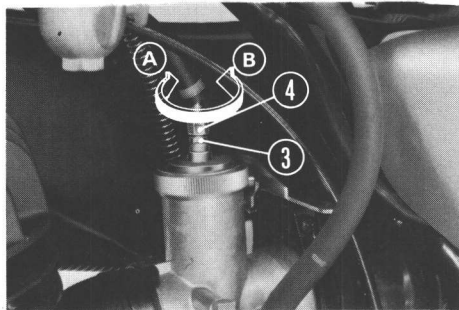

- ③ Lock nut
- ④ Throttle cable lower adjuster

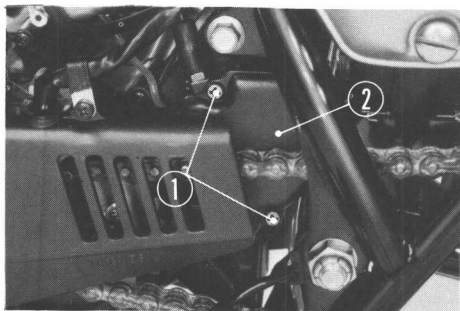

- ① Oil pump cover attaching screws
- ② Oil pump cover