


### Adjustment of clutch:


1. Align the clutch lifter lever ① with the index mark ② on the crankcase. To adjust, loosen the lock nut ③, and turn the clutch cable lower adjuster ④. (page 45).
2. Remove the clutch adjuster cap from the right crankcase cover.
3. Loosen the adjuster lock nut ⑤ and turn the clutch adjuster ⑥ clockwise until it no longer turns. From that position, turn the adjuster counter-clockwise 1/2 turn and tighten the lock nut.

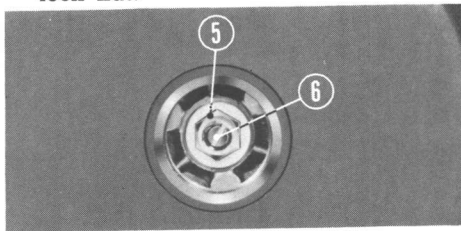

⑤ Lock nut      ⑥ Clutch adjuster

### Check the clutch lever free play:

4. The normal clutch lever free play is **0.4~0.8 in. (10~20 mm)** at the tip of the lever ⑦. To adjust, remove the dust cover, loosen the lock nut ⑧ and turn the upper adjuster ⑨. Turning the adjuster in direction ⑩ will increase the play and turning it in direction ⑪ will decrease the play. After adjusting, tighten the lock nut and install the dust cover.

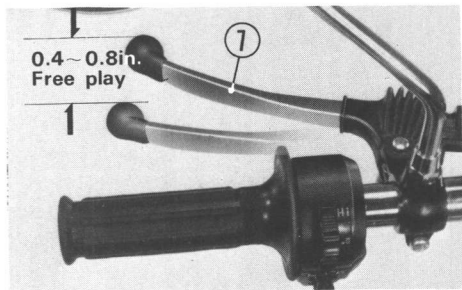

⑦ Clutch lever