

to the reference marks ⑦ on both sides of the rear fork.


- c. Tighten the rear axle nut and secure the nut with a new cotter pin.

And then tighten the lock nuts ④.

- d. Recheck drive chain tension.
- e. After adjusting the drive chain, adjust the drive chain roller. To adjust, loosen the locking bolt ⑧ until there is **0.4 in. (10 mm)** clearance between the lower surface of the chain and the roller ⑨. Then retighten the locking bolt.

CAUTION :

Check alignment of the chain protector ⑩. If the chain protector should become bent, it may rub against the drive chain and cause rapid wear.

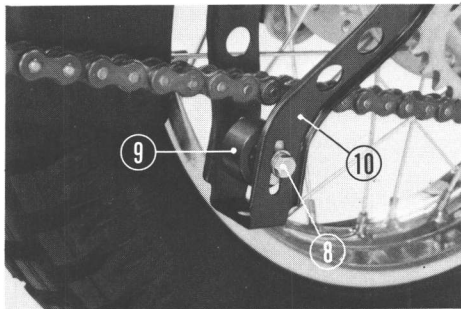

- ⑧ Locking bolt
- ⑨ Roller
- ⑩ Chain protector