


Rear Suspension Lubrication

There is a grease fitting at end of the rear fork pivot. The rear fork pivot should be lubricated every 3,000 miles with multipurpose grease, type NLGI No. 2.

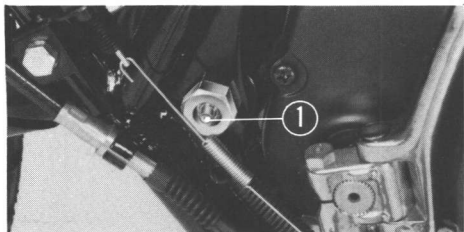


① Grease nipple

Front Wheel Removal

To remove the front wheel, proceed as follows:

1. Place a wood block under the engine and raise the front wheel off the ground.

2. Remove the cotter pin ①, and disconnect the front brake cable ② from the brake arm.
3. Remove the speedometer cable set screw ④, and disconnect the speedometer cable ⑤ (page 57).
4. Remove the front axle holder nuts ③ (four on each side), remove the front axle holders (one on each side),

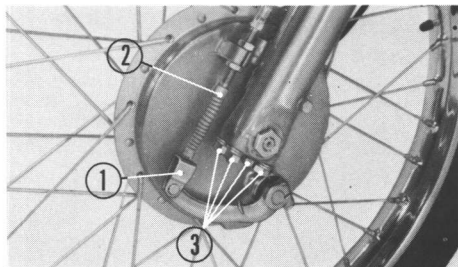

① Cotter pin ② Front brake cable
③ Front axle holder nuts