



# Instruments & Controls

The items listed below are described in this section.

Operation Component Locations .....	10
Fuel Gauge .....	13
Indicators .....	14
Neutral Indicator .....	14
Reverse Indicator .....	14
Parking Brake Indicator .....	14
4WD Indicator .....	15
Front Differential Lock Indicator .....	15
High Coolant/Oil Temperature Indicator .....	15
PGM-FI Malfunction Indicator Lamp (MIL) .....	16
Low Fuel Indicator .....	16
Driver Controls .....	17
Ignition Switch .....	17
Headlight Switch .....	18
Shift Lever .....	19
Drive Mode Lever .....	20
Parking Brake Lever .....	22
Doors .....	23
Side Nets .....	25
Seats .....	27
Seats .....	27
Adjustable Seat-Backs .....	27
Seat Belts .....	29
Passenger Handhold .....	32
Storage Compartments .....	33
Accessory Power Socket .....	34
Cargo Bed Controls .....	35
Tailgate Levers .....	35
Tie-Down Hooks .....	35
Tilt Bed Levers .....	36
Trailer Hitch .....	38