

Maintenance Schedule

Service the items listed at the indicated distance (or time, if given).

FREQUENCY (Whichever comes first)		Initial maintenance	Regular maintenance interval						Note	Refer to page				
		× 100 mi	6	12	18	24	30	36						
× 100 km		1.5	10	20	30	40	50	60						
Hours		20	100	200	300	400	500	600						
Month		1	12											
ITEMS														
Check engine oil and coolant		Check oil and coolant at fuel stop							91,104					
Check tires		Check inflation and condition once a month							135					
Check brake fluid		Check fluid level once a month							127					
Replace engine oil and oil filter		●	●	●	●	●	●		93					
*	Inspect valve clearance	●	Every 600 miles (1,000 km) or 100 operating hours, otherwise adjust only if noisy							—				
*	Clean spark arrester		Every 600 miles (1,000 km) or 100 operating hours, whichever comes first							123				
	Clean air cleaner elements												1	109
	Check air cleaner housing drain tube												2	112
	Check spark plug													120
*	Inspect idle speed	●							—					
*	Check fuel lines and connections			●		●		●	—					
	Check front and rear brakes	●			●			●	3	126				
	Check front and rear differential oil	●								99,101				

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 200).

Note 1 Service more frequently when operating in dusty areas, sand or snow.

Note 2 Service more frequently when operated in muddy, very wet conditions, or freezing temperatures.

Note 3 Service more frequently when operated in muddy conditions.