


Air Cleaner

Cleaning

1. Lift the cargo bed (page 36).
2. Unlatch the retainer clips.
3. Remove the air cleaner housing cover.

UNDER CARGO BED

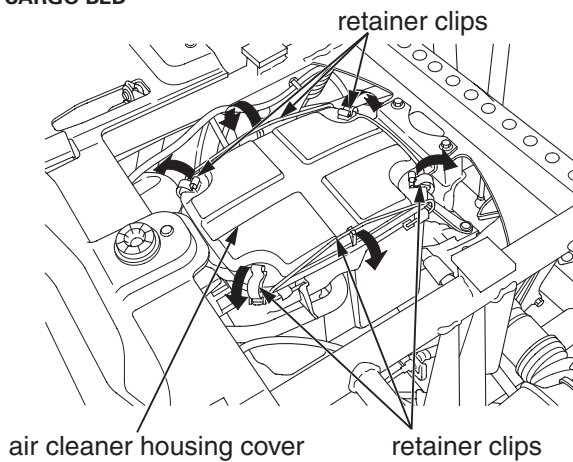

(cont'd)