

Brakes

Brake Light Switch Adjustment

Refer to *Safety Precautions* on page 69.

Periodically check the operation of the brake light switch. It is located under the front hood (page 82), just above -- and slightly behind -- the brake fluid reservoir.

The brake light should turn on just before the brake works.

Adjustment is done by turning the adjusting nut. Turn the nut in direction (A) if the switch operates too late, and in direction (B) if the switch operates too soon.

UNDER FRONT HOOD

LEFT SIDE

