

# If the Transmission Is Not Functioning Properly

---

If the PGM-FI malfunction indicator lamp (MIL) lights or blinks while driving, perform the following:

1. Stop the Honda MUV.
2. Turn the ignition switch to the OFF (O) position.
3. After the engine stops, turn the ignition switch to the ON (I) position.
4. Check the PGM-FI malfunction indicator lamp (MIL).

When the PGM-FI malfunction indicator lamp (MIL) is blinking:

Restart the engine; drive the vehicle to a location where it can be loaded and transported to a Honda dealer.

When the PGM-FI malfunction indicator lamp (MIL) returns to normal:

You may drive the vehicle as usual after restarting the engine.

However, we urge you to have your Honda MUV inspected by your Honda dealer.

(cont'd)