


NOTE:

- * Some pressure will be lost when removing the gauge from the valve. Determine the amount of loss and compensate accordingly.


4. Add air to the recommended pressure.

NOTE:

- * We recommend that you do not exceed recommended air pressure or the ride will be harsh and uncomfortable.

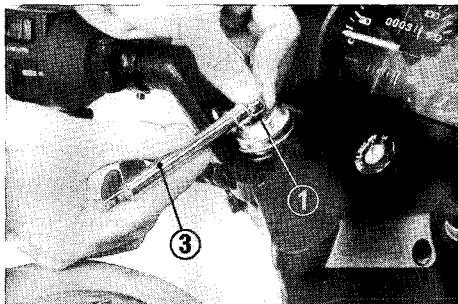

(1) Valve cap (front) (3) Air pressure gauge

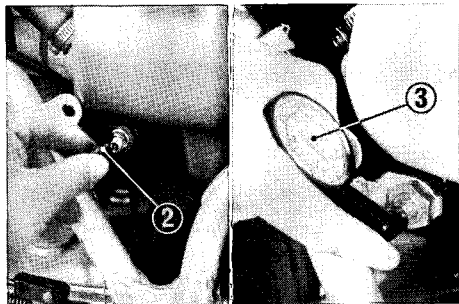

(2) Valve cap (rear) (3) Air pressure gauge