

## FUEL

### Manual Fuel Valve

The manual fuel valve (1) is on the left side under the fuel tank. Set it to ON for normal operation or RES when you start to run out of the main fuel supply. The OFF setting is only for long term storage or servicing of fuel system components.

### Automatic Fuel ON-OFF

With the fuel valve set to ON (or RES) fuel flows to the carburetors only when the engine is being started or is running. A diaphragm shuts off fuel flow when the engine is turned off.

### Reserve Fuel


When the main fuel supply is gone, turn the fuel valve to RES. The reserve fuel supply is 2.6ℓ (0.69 US gal). Refill the tank as soon as possible after switching to RES, then switch the valve back to ON.

### WARNING

- \* **Know how to operate the fuel valve while riding the motorcycle. You may avoid a sudden stop in traffic.**
- \* **Be careful not to touch any hot engine parts while operating the fuel valve.**

### NOTE:

- \* Do not operate the motorcycle with the fuel valve in the RES position after refueling. You may run out of fuel with no reserve.

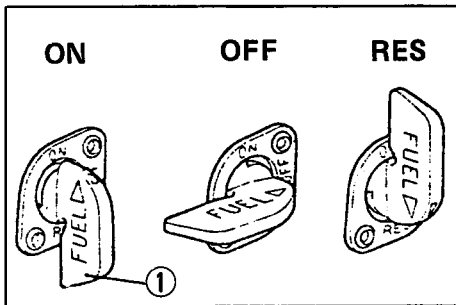

(1) Fuel valve in normal operating position