

Fuel Tank


Fuel tank capacity is 17.0 ℓ (4.5 US gal) including 2.6 ℓ (0.69 US gal) in the reserve supply.

To open the fuel tank cap (1), insert the ignition key (2) and turn it clockwise. The cap will pop up and can be lifted off.

Use low-lead gasoline with an octane number of 91 or higher.

To close the fuel tank cap, align the tab on the underside of the cap with the slot in the filler neck.

Push cap into the filler neck until it snaps closed and locks. The fuel tank cap locks

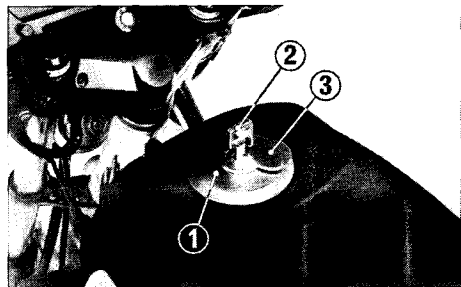


(1) Fuel tank cap (2) Ignition key
28 (3) Lock cover

automatically. Remove the key and close the lock cover (3).

WARNING

- * ***Gasoline is extremely flammable and is explosive under certain conditions. Refuel in a well-ventilated area with the engine stopped. Do not smoke or allow flames or sparks in the area where the motorcycle is refueled or stored.***
- * ***Do not overfill the tank (there should be no fuel in the filler neck). After refueling, make sure the fuel tank cap is closed securely.***

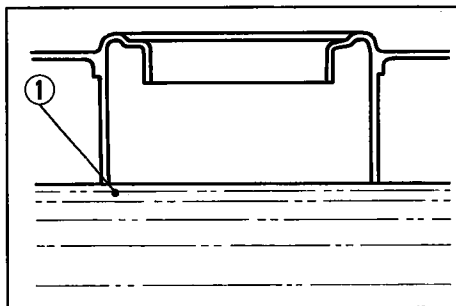

(1) Do not overfill