

Inspection

The reserve tank is behind the left side cover.

Check the coolant level in the reserve tank (1) while the engine is at the normal operating temperature. If the coolant level is near the lower level (3), remove the reserve tank cap (4) and add coolant mixture until it reaches the UPPER level mark. Do not remove the radiator cap.

WARNING

- * *Do not remove the radiator cap when the engine is hot. The coolant is under pressure and severe scalding could result.*
- * *Keep hands and clothing away from the cooling fan, as it starts automatically.*

If the reserve tank is empty, or if coolant loss is excessive, check for leaks and see your authorized Honda dealer for repair.