


Air Cleaner

The air cleaner should be serviced at regular intervals (page 50). When riding in dusty areas, service more frequently.

1. Remove the seat and the side covers.
2. Remove the fuel tank mounting bolt and disconnect the fuel line and vacuum tube from the carburetor. Remove the fuel tank (1).
3. Remove five screws (2) and the air cleaner cover (3).
4. Take out the air cleaner element (4).
5. Wash the element in non-flammable or high flash point solvent and let it dry thoroughly.

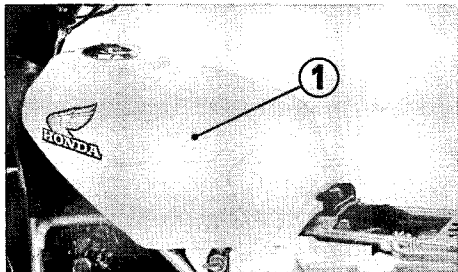


(1) Fuel tank

WARNING

- * *Never use gasoline or low flash point solvents for cleaning the air cleaner element. A fire or explosion could result.*
6. Soak the element in gear oil (SAE 80—90) until saturated, then squeeze out the excess oil.
 7. Install the removed parts in the reverse order of disassembly.

NOTE:

- * Reinstall the fuel line and vacuum tube properly.

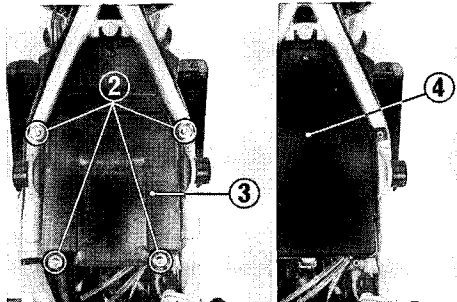

(2) Screws

(3) Air cleaner cover

(4) Air cleaner element