



8. Apply a thin coat of engine oil to the rubber seal of a new oil filter.
9. Install a new oil filter and tighten.

Torque: 26 N·m (2.7 kgf·m, 19 lbf·ft).

10. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

Torque: 30 N·m (3.1 kgf·m, 22 lbf·ft).

Engine Oil ► Changing Engine Oil & Filter

11. Fill the crankcase with the recommended oil (► P. 57) and install the oil fill cap/dipstick.

Required oil

NC700S/SA

When changing oil & engine oil filter:

3.4 litres (3.6 US qt, 3.0 Imp qt)

When changing oil only:

3.1 litres (3.3 US qt, 2.7 Imp qt)

NC700SD

When changing oil & engine oil filter:

3.4 litres (3.6 US qt, 3.0 Imp qt)

When changing oil only:

3.2 litres (3.4 US qt, 2.8 Imp qt)

12. Check the oil level. ► P. 70
13. Check that there are no oil leaks.
14. Install the lower cowl.