


Electrical Trouble ► Burned-out Light Bulb


**Brake/Tail Light Bulb**

1. Remove the screw A.

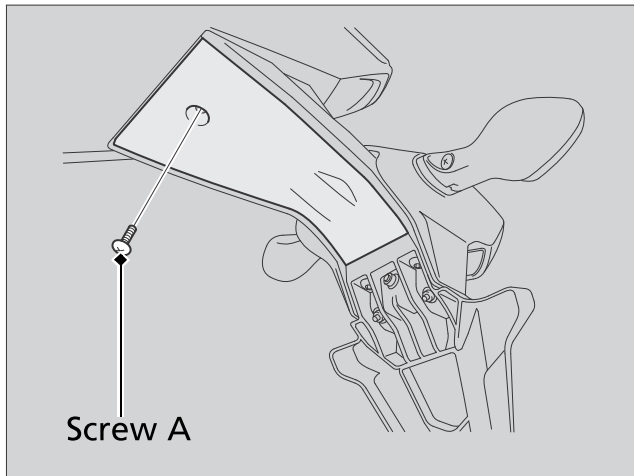

Troubleshooting

2. Open the under side of the rear fender.
3. Remove the screws B and the screw C.
4. Remove the brake/tail light assembly.

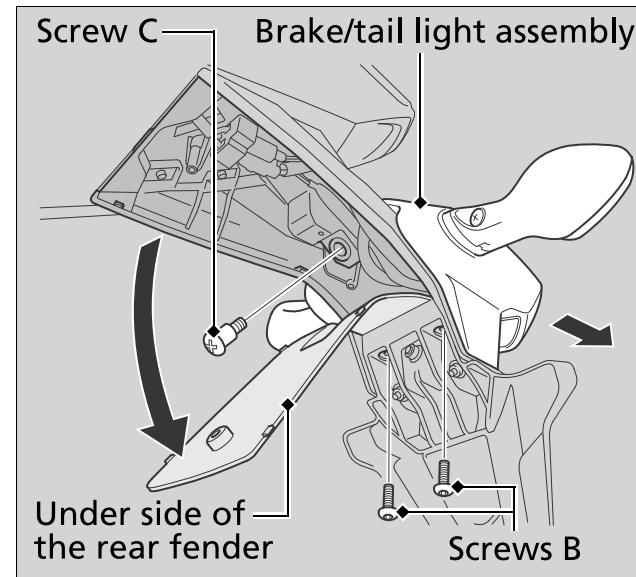

5. Turn the socket counterclockwise, and remove it.