


6. Slightly press the bulb and turn it counterclockwise.

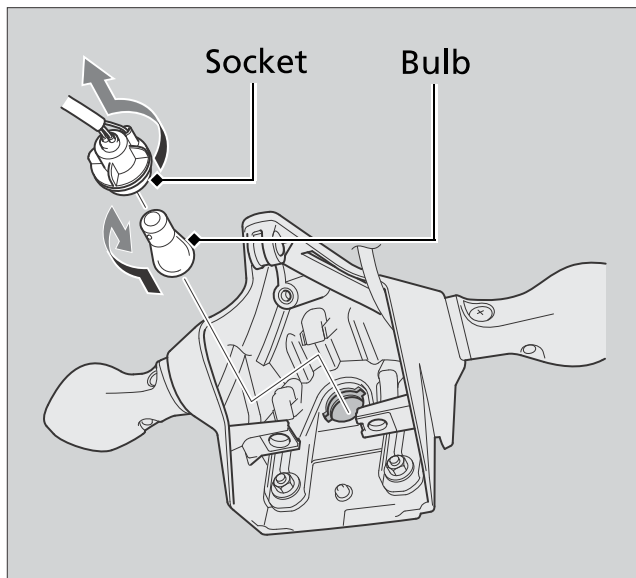


7. Install a new bulb and parts in the reverse order of removal.
8. Install and tighten the screw C.

Torque: 6 N·m (0.6 kgf·m, 4.4 lbf·ft).

Electrical Trouble ► Burned-out Light Bulb

Front/Rear Turn Signal Bulb

1. Remove the screw.
2. Remove the turn signal lens.
3. Slightly press the bulb and turn it counterclockwise.

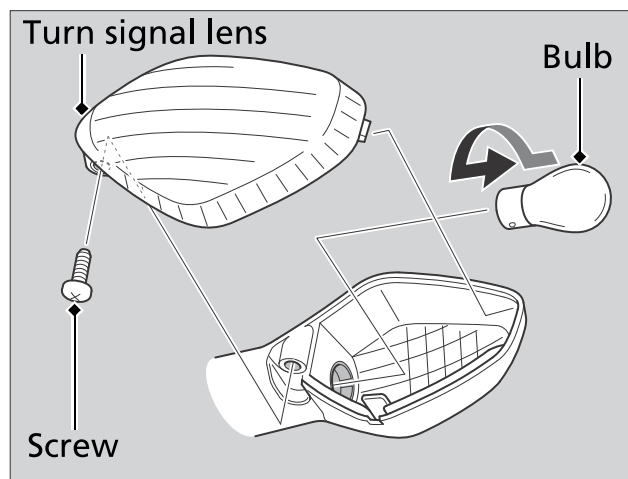

4. Install a new bulb and parts in the reverse order of removal.
► Use only the amber bulb.

Troubleshooting