


SIDE STAND

(See "Maintenance precautions" on page 75).
Check that the side stand system is functioning correctly.

- Check the spring for damage or loss of tension and the side stand assembly for freedom of movement.
- Check the side stand ignition cut-off system:
 1. Place the scooter on the center stand.
 2. Put the side stand up and start the engine.
 3. Lower the side stand the engine should stop as you put the side stand down.

If your side stand system does not operate as described, see your Honda dealer for service.

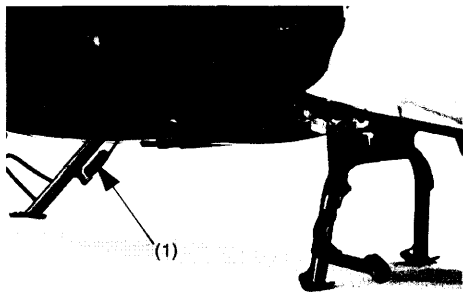

(1) Spring