

## RIGHT HANDLEBAR CONTROLS

### Headlight Switch

The headlight switch (1) has three positions, "H", "P" and "OFF" marked by a dot to the right of "P".

H: Headlight, taillight, position light and meter lights on.

P: Position light, taillight and meter lights on.


OFF (dot): Headlight, taillight, position light and meter lights off.

### Starter Button

The starter button (2) is below the headlight switch (1).

When you press in the button, the starter cranks the engine.

See pages 29 for "STARTING THE ENGINE."

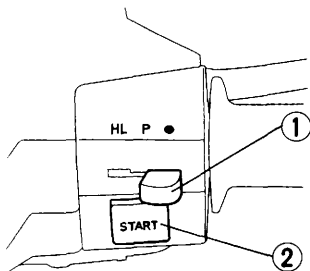

(1) Headlight switch

(2) Starter button