

SEAT


Rear seat

Removal :

1. Insert the ignition key into the seat lock (1) and turn it clockwise.
2. Pull the rear seat (2) back and up.

Installation :

1. Insert the tab (3) into the recess under the frame. Push down on the rear of the rear seat.

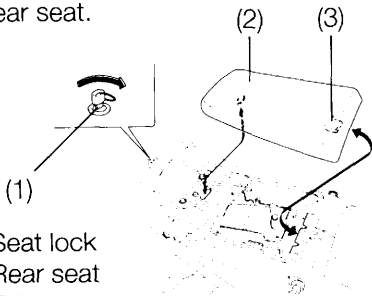

- (1) Seat lock
(2) Rear seat
(3) Tab


Front seat

Removal :

1. Remove the rear seat.
2. Pull the seat lock lever (1) up. Then pull the front seat (2) up and back.

Installation :

1. Insert the tab (3) into the recess under the frame.
2. Push down on the rear of the front seat.

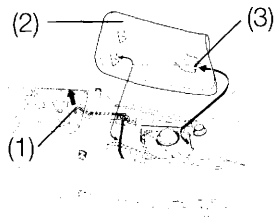

- (1) Seat lock lever
(2) Front seat
(3) Tab