

## SPARK PLUG

(Refer to the maintenance precaution on page 58)

Recommended plugs:

Standard :

B9ECS (NGK)

1. Disconnect the spark plug cap from the spark plug.
2. Clean any dirt from around the spark plug base. Remove the spark plug using the plug wrench furnished in the tool kit.