


To Unlock the Ignition Switch

Enter operating range with the Honda smart card key (1).

1. With the engine stop switch in the “ \bigcirc ” (RUN) position, push the ignition switch (2). If the ID authentication is done properly, the Honda smart card key indicator (3) on the meter lights.
2. Turn the ignition switch to ON position.

When the Honda smart card key system does not work properly, see page 66 .

If someone without the card key tries to turn the ignition switch, the ignition switch rotates freely. If you notice the ignition switch is in a different position, turn the ignition switch to the original position (OFF or LOCK) and then push the ignition switch in.

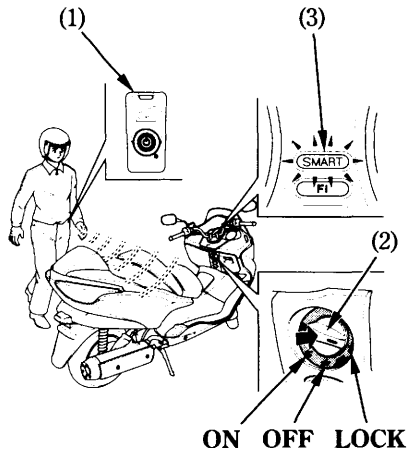

- (1) Honda smart card key
- (2) Ignition switch
- (3) Honda smart card key indicator