

Shift Switch (5) (NSS250EX)

When the Automatic Shift Mode is selected:

Press the shift switch to select the D mode or S mode.

When the 6-speed Manual Mode is selected:


Press the shift switch to shift the gear between 1st and 6th.

Shift switch (+) (6):

- Automatic shift mode: select the D mode.
- 6-speed manual mode: shift up.

Shift switch (-) (7):

- Automatic shift mode: select the S mode.
- 6-speed manual mode: shift down.

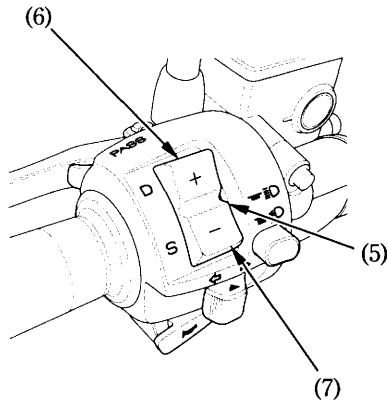

- (5) Shift switch
- (6) Shift switch (+)
- (7) Shift switch (-)