


To remove:

1. Open the retractable box cover.
2. Remove the screws (3).
3. Pull out the retractable box.

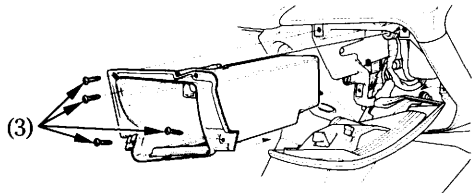

(3) Screws